


MICROWAVE LEG ASSEMBLY

MODEL: BC16MWR

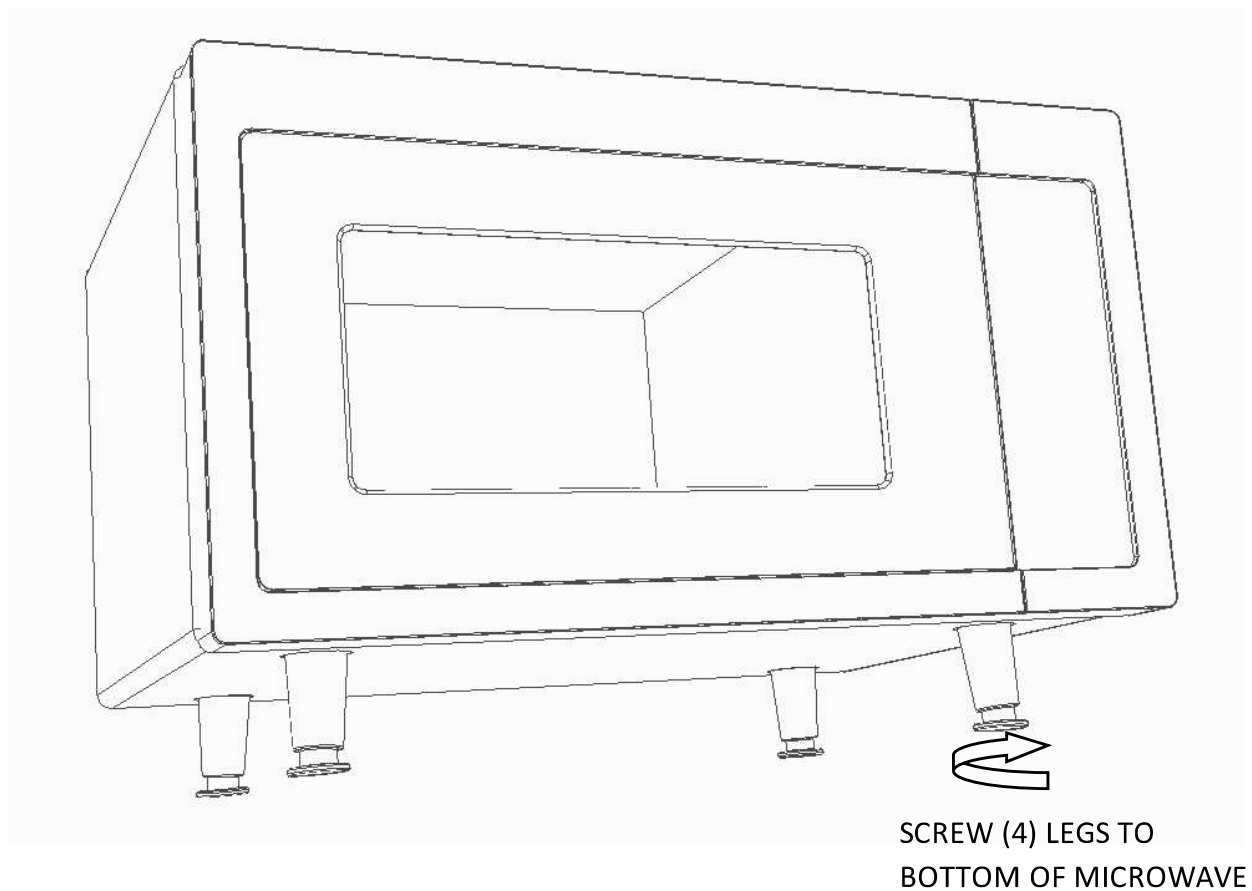

NOTE:

- REMOVE PROTECTIVE TAPE FROM MOUNTING HOLES IN BOTTOM OF MICROWAVE
- CAREFULLY LINE UP THREADED END OF LEG TO MOUNTING HOLE TO START THREAD IN THE HOLE
- DO NOT OVER-TIGHTEN LEGS
- IF MICROWAVE IS SITTING ON AN UN-LEVEL SURFACE THE FOOT PADS ON THE LEGS CAN BE ROTATED TO RAISE OR LOWER THE FOOT PAD